

How to Use Your Seat Belt System - Latching Instructions

How to latch 3-point seat belt

Note: Before latching seat belt, adjust seat to proper position.

1. Hold the latch and pull the seat belt across body. Do not twist webbing. Your seat belt is sensitive. The belt locks only if there is a sudden deceleration or a crash.
2. Insert the latch into the buckle until you hear a "click."
3. Give a short tug on the latch to ensure the buckle is locked.
4. Tighten the seat belt by pulling up on shoulder belt. This will take up the additional seat belt slack.
5. Shoulder belt must lay flat across your chest.
6. For added comfort, adjust seat belt height adjuster (if available).

How to unlatch seat belt

1. Push the button on the end of the buckle to release the latch.
2. If Komfort Latch® is in use, release it by pulling on the shoulder strap.
3. Allow webbing to retract to be stored until next use.

How to use center position seat belt



Fig. 2

To lengthen belt

Turn the adjustable latch at a right angle to the webbing and pull away from the latch using the lower webbing strap.




Fig. 3

To shorten belt

Pull the top webbing strap directly away from the adjustable latch.

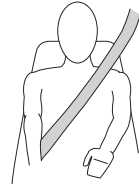


Fig. 4

To release belt

Depress button with thumb or finger. Latch will eject from buckle.

Proper Seat Belt Fit



Proper location of shoulder belt. Belt must be centered on your shoulder and chest away from your face and neck.



Wrong

Shoulder belt must not rub against face or neck. Move Seat Belt Height Adjuster down to adjust.



Wrong

Shoulder belt must not hang off shoulder. Move Seat Belt Height Adjuster up to adjust.

Fig. 1